


## Installation Guide

### AVTQ stuffing box - SET

#### Removing of old stuffing box and nut.


1



Unscrew the old stuffing box nut and moves it back together with washers and rubber.


#### Mounting the new stuffing box elements onto sensor.

2

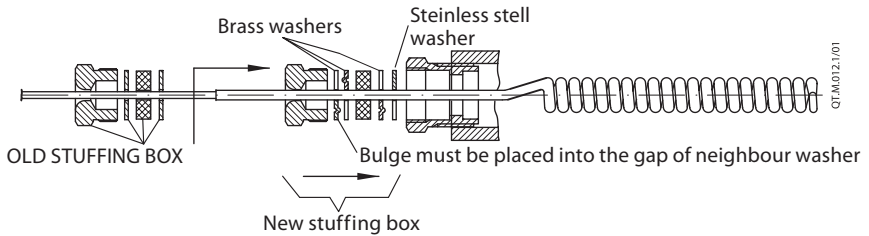

#### Premounting (in vertical position)

3

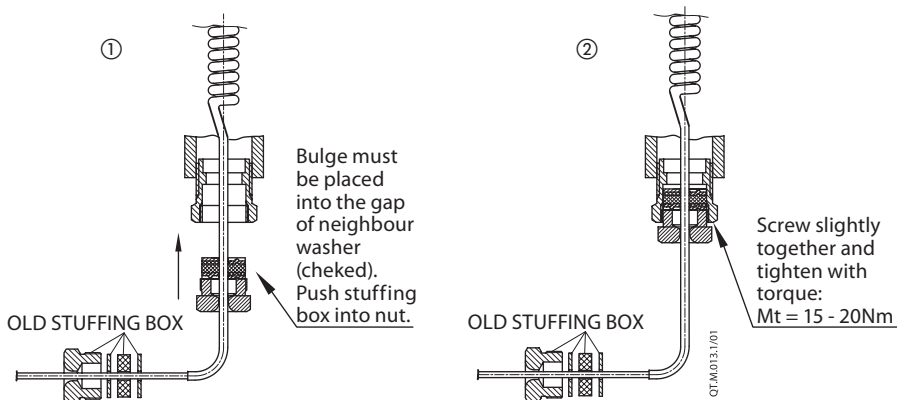

# Installation Guide AVTQ stuffing box - SET

---